

CRANE 3S Camera Compatibility List

Updated on March 19th, 2020

V1.00

Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Electronic Zoom	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus(Focus Wheel)	Camera Control Cable Type	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode						
Sony a9	√	√	√	√	-	-	-	-	-	-	-	-	-	√	-	-	Type-C to Multi USB	V5.00	1. Please select "PC Remote" for your camera's "USB Connection".
Sony a7R4	√	√	√	√	-	-	-	-	-	-	-	-	-	√	-	-	Type-C to Multi USB	V1.00	
Sony a7R3	√	√	√	√	-	-	-	-	-	-	-	-	-	√	-	-	Type-C to Multi USB	V3.01	
Sony a7M3	√	√	√	√	-	-	-	-	-	-	-	-	-	√	-	-	Type-C to Multi USB	V3.01	
Sony a7R2	√	√	√	√	-	-	-	-	-	-	-	-	-	√	-	-	Type-C to Multi USB	V4.00	
Sony a7M2	√	√	√	√	-	-	-	-	-	-	-	-	-	√	-	-	Type-C to Multi USB	V3.00	
Sony a7S2	√	√	√	√	-	-	-	-	-	-	-	-	-	√	-	-	Type-C to Multi USB	V3.00	
Sony a6600	√	√	√	√	-	-	-	-	-	-	-	-	-	√	-	-	Type-C to Multi USB	V1.00	
Sony a6500	√	√	√	√	-	-	-	-	-	-	-	-	-	√	-	-	Type-C to Multi USB	V1.06	
Sony a6400	√	√	√	√	-	-	-	-	-	-	-	-	-	√	-	-	Type-C to Multi USB	V2.00	
Sony a6300	√	√	√	√	-	-	-	-	-	-	-	-	-	√	-	-	Type-C to Multi USB	V2.01	
Sony a6100	√	√	√	√	-	-	-	-	-	-	-	-	-	√	-	-	Type-C to Multi USB	V1.00	
Sony a6000	√	√	√	√	-	-	-	-	-	-	-	-	-	√	-	-	Type-C to Multi USB	V3.21	
Panasonic G9	√	√	√	√	-	√	√	√	√	√	√	√	√	-	√	×	Type-C to Micro USB	V2.1	1. Please select PC(Tether) for your camera's "USB mode". 2. When using electronic focusing, the camera lens should be in "MF" mode.
Panasonic GH5	√	√	√	√	-	√	√	√	√	√	√	√	√	-	√	×	Type-C to Type-C USB	V2.5	
Panasonic GH5S	√	√	√	√	-	√	√	√	√	√	√	√	√	-	√	×	Type-C to Type-C USB	V1.5	
Panasonic S1	√	√	√	√	-	×	×	×	×	×	×	×	×	-	-	×	Type-C to Type-C USB	V1.3	
Panasonic S1H	√	√	√	√	-	×	×	×	×	×	×	×	×	-	-	×	Type-C to Type-C USB	V1.0	
Canon 1DX2	√	√	√	√	√	√	√	√	√	√	√	√	√	-	(Unavailable in Live View mode)	×	Type-C to Micro USB	V1.0.2	1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera 2. If using electronic focusing when recording a video, please "Disable" the "Movie Servo AF".
Canon 5D3	√	√	√	√	√	√	√	√	√	√	√	√	√	-	(Unavailable in Live View mode)	×	Type-C to Mini USB	V1.3.5	
Canon 5D4	√	√	√	√	√	√	√	√	√	√	√	√	√	-	(Unavailable in Live View mode)	×	Type-C to Micro USB	V1.0.4	
Canon 5DS	√	√	√	√	√	√	√	√	√	√	√	√	√	-	(Unavailable in Live View mode)	×	Type-C to Micro USB	V1.1.1	
Canon 5DS R	√	√	√	√	√	√	√	√	√	√	√	√	√	-	(Unavailable in Live View mode)	×	Type-C to Micro USB	V1.1.2R	
Canon 6D	√	√	√	√	√	√	√	√	√	√	√	√	√	-	(Unavailable in Live View mode)	×	Type-C to Mini USB	V1.1.8	
Canon 6D2	√	√	√	√	√	√	√	√	√	√	√	√	√	-	(Unavailable in Live View mode)	×	Type-C to Mini USB	V1.0.4	
Canon 80D	√	√	√	√	√	√	√	√	√	√	√	√	√	-	(Unavailable in Live View mode)	×	Type-C to Mini USB	V1.0.2	
Canon 90D	√	√	√	√	√	√	√	√	√	√	√	√	√	-	(Unavailable in Live View mode)	×	Type-C to Micro USB	V1.0.0	
Canon EOS R	√	√	√	√	-	√	√	√	√	√	√	√	√	-	-	×	Type-C to Type-C USB	V1.6.0	
Canon EOS RP	√	√	√	√	-	√	√	√	√	√	√	√	√	-	-	×	Type-C to Type-C USB	V1.4.0	
Nikon D850	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	×	Type-C to Micro USB	V1.10	1. When using electronic focusing, the camera lens should be in A(AF) mode and select AF-S or AF-C in focusing mode.
Nikon Z6	√	√	√	√	-	√	√	√	√	√	√	√	√	-	√	×	Type-C to Type-C USB	V2.01	
Nikon Z7	√	√	√	√	-	√	√	√	√	√	√	√	√	-	√	×	Type-C to Type-C USB	V2.00	
Nikon Z50	√	√	√	√	√	√	√	√	√	√	√	√	√	-	√	×	Type-C to Micro USB	V1.00	
Canon C200	-	-	√	√	-	-	-	-	-	-	-	-	-	-	-	-	Type-C to φ2.5mm Plug	V1.0.2.1.00	
Canon C300	-	-	√	√	-	-	-	-	-	-	-	-	-	-	-	-	Type-C to φ2.6mm Male Jack	V1.1.0.1.00	
Sony FS5	-	-	√	√	-	-	-	-	-	-	-	-	-	-	-	-	Type-C to φ2.7mm Male Jack	V1.01	
Sony FS7M2	-	-	√	√	-	-	-	-	-	-	-	-	-	-	-	-	Type-C to φ2.8mm Male Jack	V1.22	
Sony FX9	-	-	√	√	-	-	-	-	-	-	-	-	-	-	-	-	Type-C to φ2.9mm Male Jack		
Sony Z280	-	-	√	√	-	-	-	-	-	-	-	-	-	-	-	-	Type-C to φ2.10mm Male Jack	V1.10	